Clarion
CAR AUDIO & BEYOND

INSTALLATION INSTRUCTIONS
AVC-G2-XX

Applications:

Chevrolet	GMC
2000 - up Tahoe / Suburban	**2000 - up Yukon / Yukon XL**
1999 - up Silverado	**1999 - up Sierra**

The AVC-G2 is designed to replace the rear portion of the factory center console with a specially designed monitor shroud that adds the option of rear entertainment while retaining the factory cosmetic appeal. Please note which Clarion monitor is to be used with this housing and follow the mounting directions for that model.

Console Disassembly and Clarion Monitor Shroud Preparation

1. Open the center console lid and remove the (7) phillips screws on top of the console pocket and the (4) bolts at the bottom remove the pocket.
2. Unplug the rear stereo control and ACC Power Plug.
3. Carefully push out the (2) clips at the bottom of the inside rear console. (Be carefull not to break the tabs that the clips are attached to.)
4. Lift the top of the console to remove.
5. Take the clips off of the factory rear console and re use them on the AVC-G2 shroud.
6. Install the factory stereo controls onto the AVC-G2 shroud.

Mounting the Monitor

1 Connect the monitor wiring as directed in the installation instructions for that unit and mount the hideaway box for the monitor or tuner (if equipped) in a suitable location.
2. Locate the proper mounting adapter for the monitor being used and attach the monitor to the adapter as illustrated.
3. Connect the monitor signal/power cable(s) as directed in the installation manual for that unit.
4. Secure the adapter to the Clarion Monitor Shroud using the (4) screws provided in the kit.

Console Re-assembly

1. Attach the Clarion AVC-G2 onto the factory console.
2. Plug in the rear stereo control.
3. Reinstall the console pocket.
4. Replace the (4) bolt in bottom of the console and the (7) screws on the top of the console pocket.

©Clarion Corporation of America, Gardena, CA

Installing the Monitor

Locate the proper mounting adapter for the monitor being used and attach the monitor to the adapter as illustrated below.

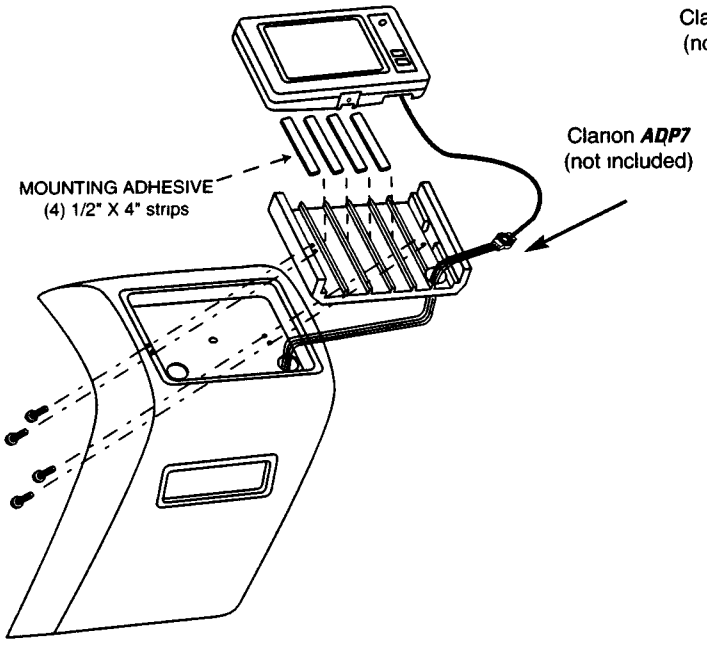

Figure 1
Mounting Clarion **VMA8582** 7" monitor

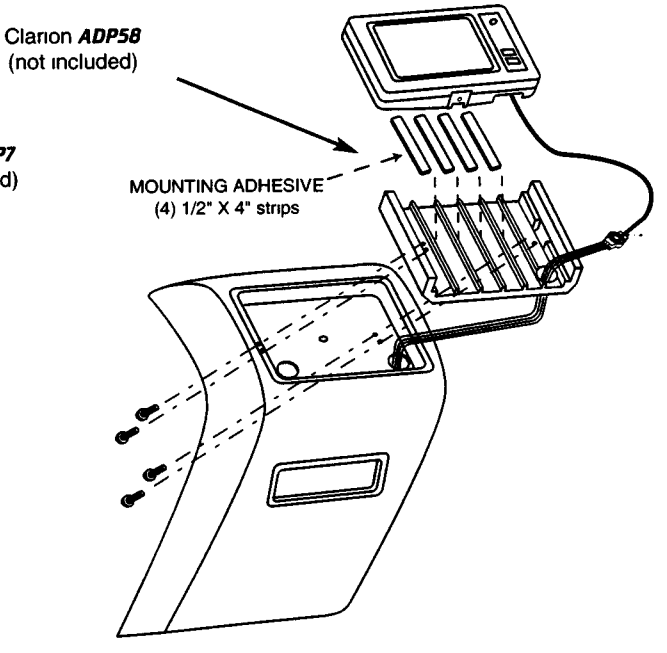

Figure 2.
Mounting Clarion **VMA6481** 5.8" monitor

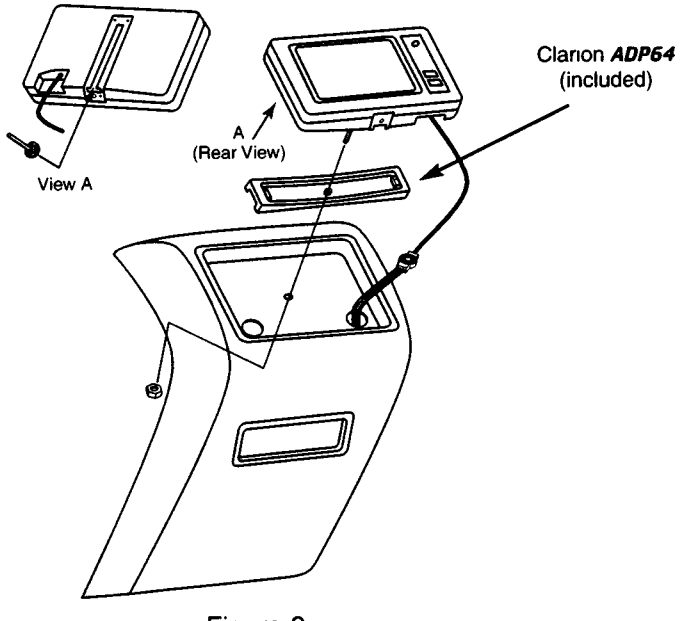

Figure 3.
Mounting Clarion **VMA6491** 6.4" monitor

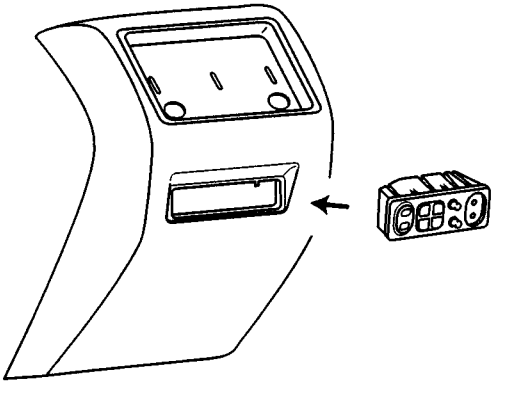

Figure 4.
Installing the Rear Stereo control

Clarion Corporation of America
661 West Redondo Beach Blvd.
Gardena, CA 90247
1-800-Go-Clarion
www.clarion-usa.com

Clarion
CAR AUDIO & BEYOND

Attention Installers:

The Clarion AVC Monitor Shrouds now include an adapter plate designed to be used with the Clarion VMA6491 LCD monitor.

Using the mounting bolt supplied with the VMA6491, secure the adpter between the monitor and shroud.

The diagram to the right illustrates how the adapter plate is to be installed.

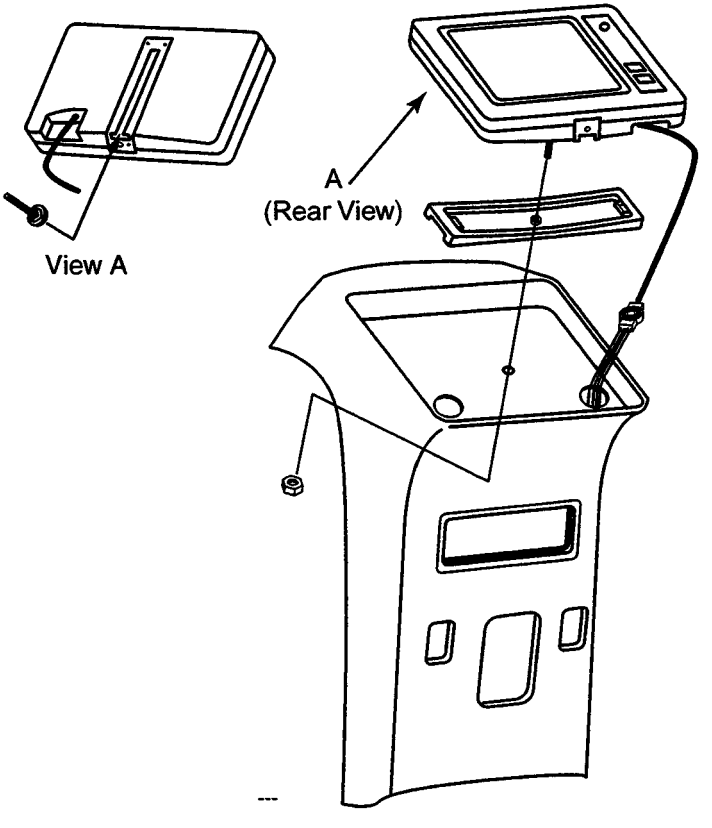

©Clarion Corporation of America, Gardena, CA

IMPORTANT

KIT

INCLUDES

QTY	
1	MONITOR SHROUD
1	6.4 INCH ADAPTER

****

ADDITIONAL PARTS
FOR AVCF-3 SHROUDS ONLY
INCLUDES

QTY	
4	3/8 #6 SCREWS
4	SPRING CLIPS
1	DVD/STEREO BESSEL
1	A/C BLANK PANEL

****

ADDITIONAL PARTS
FOR AVCR-1 SHROUDS ONLY
INCLUDES

QTY	
6	3/8 #4 SCREWS
1	STEEL (T) BRACKET

****